TIPMATIC

For handle-free wood/aluminium frame doors and glass/mirror doors



- Doors open to a convenient opening angle by gently tapping the front
- All hinges without self-closing mechanism can be used
- Wide catching range of magnet ensures reliable door closing
- The front gap can be adjusted between 2.5 and 5.5 mm using the integrated, self-locking and toolless depth adjustment
- Installation in the front edge of the cabinet or using an adapter plate

ORDER INFORMATION

Tipmatic Pin	For drilling	Artno.
Hole edge cover 1 mm Hole drilled into cabinet front edge Plastic RAL 7036, platinum grey Includes self-adhesive plate, screw-on plate and screw	min. 60	F069135 396


Adapter plate for line hole drilling	For screw fixing	Artno.
Suitable for 28 and 37 mm hole spacing Fixing with special Euro screws (Ø 6.3 x 13.5 mm) or chipboard screws (Ø 3.5 x 13) Plastic RAL 7035, light grey	37 (28) Ø 3,5 x 13 Ø 6,3x13,5	F069 063 310


Frame adapter plate	For screw fixing	Artno.
For quick retrofit installation Fixing with chipboard screws (Ø 3.5 x 13 mm) Plastic RAL 7035, light grey	9.5 Ø 3.5 x 13	F069 073 697


Linear adapter plate	For screw fixing	Artno.
 Design solution – also in conjunction with inset doors Fixing with chipboard screws (Ø 3.5 x 13 mm) Plastic RAL 7035, light grey 	17 32 Ø 3.5 x 13	F069 073 696

Nexis Impresso	125	Nexis Slide-on	231
Nexis Click-on	167	Installation instructions	304

PLANNING AND INSTALLATION INSTRUCTIONS

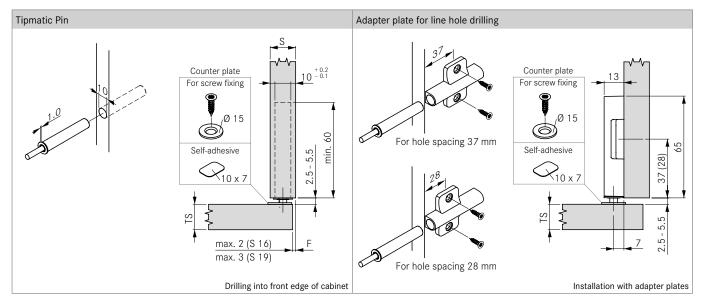

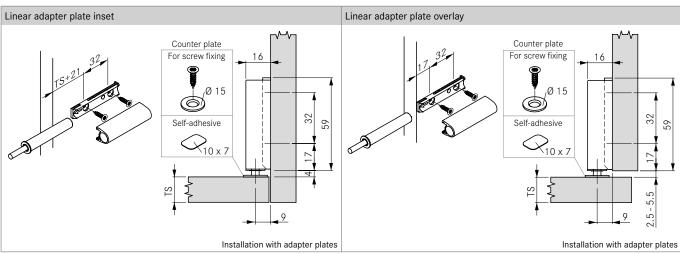

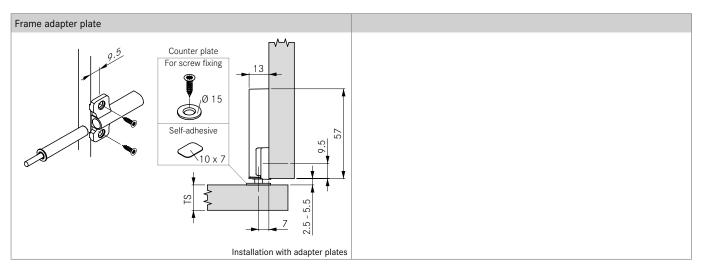

LEGEND

F Reveal

S Cabinet side wall


TS Door thickness

TIPMATIC

Installation instructions

INSTALLATION INSTRUCTIONS

All dimensions in millimetres

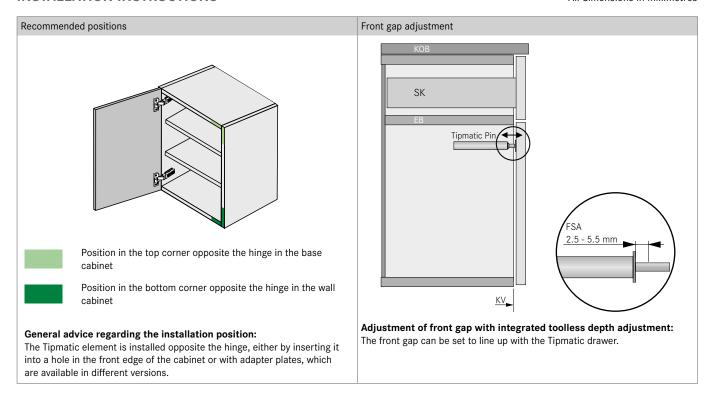

Tipmatic	302			